


**Data**

Power input	210 W
Blower speed	1/min
1st detent	1300
2nd detent	2300
3rd detent	3000
Air volume at 12 V (m <sup>3</sup> /min)	7.0

**Removal**


- 1 Remove covers at right under instrument panel (68—150).
- 2 Unscrew screw (22) and remove contact plate (25). Then pull off flat plug and remove screws (23) with clips on 1st version.

1st version

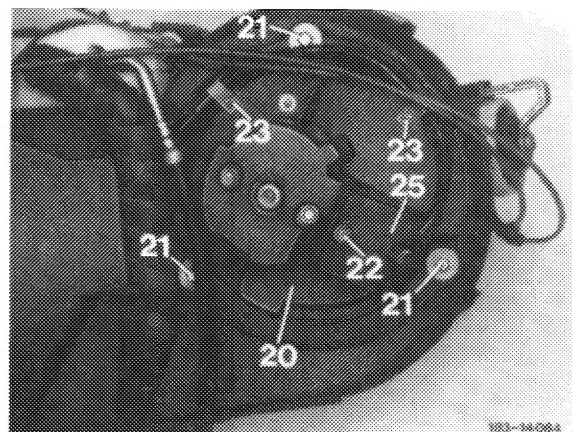

- 3 Expose electric line on 2nd version.
- 4 Unscrew screws (21) and blower (20) in downward direction while turning blower slightly.

2nd version

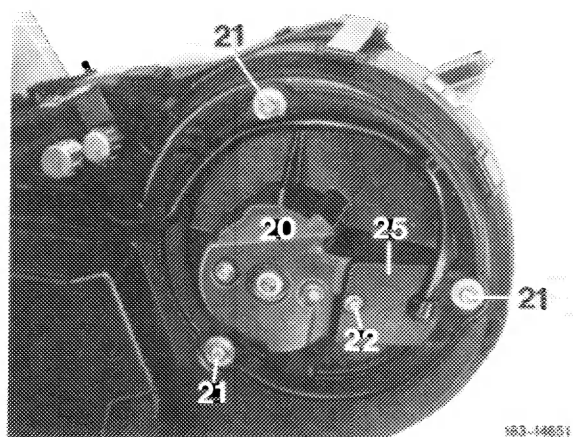

## Installation

---

- 5 Introduce blower into evaporator housing.
- 6 Turn blower in evaporator housing into correct installation position and attach with washers and screws (21).
- 7 Plug electric lines to contact plate, screw-on contact plate and mount supply line.
- 8 Check blower for function.